

Product Name: **1m Bubble Tube with Floating Beads**

Product Code: **BT100C**

Specification

Size: H100cm (including base) x Base Dia 15cm (Approx.)

Weight: 3.2kg without water (approx.)

Material: Tube: Acrylic Base: Stainless Steel

LED: non – replaceable multi coloured LEDs

Transformer rating

Input: 230 – 240V – 50Hz

Output: 12Vac – 750mA 9.0VA

Contents:

1. Bubble Tube
2. Adaptor
3. Remote Control (Include 1 x CR2025 Lithium Cell Battery)
4. A pack of beads
5. Lid Cover

Tools required:

Distilled Water

WARNING!

- Contains sequences of flashing lights may affect individuals who are susceptible to photosensitive epilepsy or other photosensitivities.
- This product is not a toy, to be used under adult supervision only. Small parts included could potentially cause a choking hazard.

Safety Warnings:

- Before you start, please read these instructions carefully and retain for future reference. Check the contents inside the packaging and ensure you have all the required parts listed and there are no missing parts. If any parts are missing **DO NOT** attempt to assemble the product.
- Before setting up, ensure the product is not damaged. If any part of the product is damaged, do not attempt to assemble and use.
- Do not attempt to hardwire this product to the mains electrical supply. It operates using an adaptor.
- Only use the adaptor supplied with this product and no other adaptor must be used.
- This product contains non-replaceable LEDs. If any of the LEDs cease functioning, the whole unit must be disposed of according to your local council guidelines.
- This is not a toy. Contains small parts, potentially may cause choking hazard, keep away from children and pets during assembly.
- Remove all packaging before setup. Do not operate in packaging
- Keep away from heat sources or naked flame
- Ensure cable is placed such that no trip, entanglement or strangulations hazards are likely to occur
- **DO NOT** use live fish in this tube.
- **DO NOT** attempt to move the product when filled with water or when plugged to the mains.
- **ALWAYS** disconnect from the mains when cleaning or changing the water.
- This product contains moving parts, some noise and vibration is expected.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they are been supervised by a competent person responsible for their safety.

5-6 Agecroft Trading Estate, Langley Road, Salford Manchester M6 6JD

Tel: +44 161 737 5099 Website: www.play-learn.co.uk


Help & Support: help@play-learn.co.uk

Instructions

Two competent adults are required to assemble this product.

1. It is recommended to test the product to ensure it is fully working. Add 0.5lt - -1lt of water o the acrylic tube by removing the lid and gently pouring water directly into the top of the Tube. Plug the adapter in and turn the item on, ensuring the lights and remote is working, ensuring the pump is heard. You should see a small amount of bubbles occurring in the bottom of the panel. Now empty the water again by pouring out into a bowl, sink, bath or outside.
2. Decide where you wish to place this product and stand in position.
3. Once in position gently fill the acrylic tube with water until the water level is approximately 1/2'' from the rim.
4. Add the beads to the bubble tube
5. Plug the adapter in the black jack/socket at the base and plug the other end into the wall socket.
6. Using your remote to control the lights and mode

Remote Control Functions

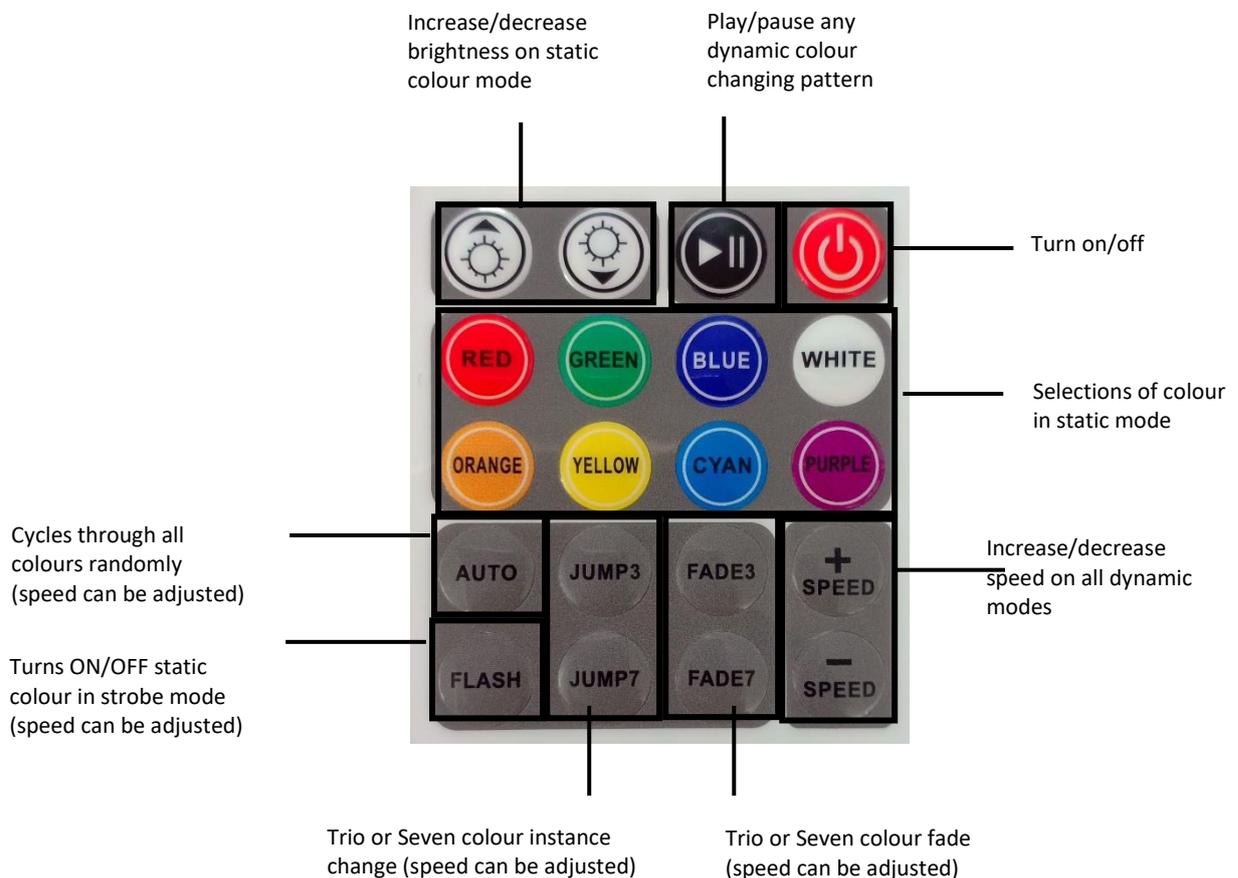

To change the battery in the remote, please follow the instructions on the reverse of the remote.

Troubleshooting

Here at Playlearn we have spent many years developing our bubble feature range to ensure they are trouble free. We want you to be completely satisfied with your purchase and we invite any questions and concerns you have. Please e-mail us at help@play-learn.co.uk or call 0161 737 5099. The product is delicate and needs maintaining for longevity. Please note the section 'Distilled Water vs Tap Water' below. Anytime maintenance is required or the water needs changing, we recommend 2 persons to do this.

Distilled water vs tap water : Whilst this product has been designed to work well with tap water, the product will need higher maintenance due to algae and the water becoming cloudy. The water will need changing every few months whereas using distilled water, the water will stay cleaner for longer.

Cleaning : If you have not changed the water for some time algae can build up. You need to check your water often, if it starts to change colour and/or look darker it is time to change the water. If algae builds up around the jets this will prevent bubbles from producing. To clean you will need to use warm water and a mild detergent (not one that creates soapy bubbles) you will need to empty the acrylic tube, add around 2 liters of warm water and a drop of mild detergent and leave to soak for an hour, rinse and possibly repeat depending how much algae has built up. Ensure the product is rinsed with just warm water after using detergent to wash away any access residue.

No bead movement: Is the item plugged in and switched on? Is the pump making a noise? If there is no sound coming from the base. If the pump is not making any sound, please check the adapter, is the adapter warm? If yes, the adapter is ok, if it's cold it means the adapter isn't working and you will need a replacement adapter. Please contact product support.

Remote control not functioning: The remote control is designed to change the light colours and strobing patterns. It will not turn off the bubbles. If the lights are on but they are not changing with the remote control, try going a little closer to the bubble wall. If it still does not work, please change the battery. If this fails to fix the problem, contact the manufacturer for a replacement remote. If the new remote still does not fix the problem, the controller box may need replacing. Please contact us for further help.

Warranty Information

Thank you for choosing our product. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within 12 months from the date of purchase. Valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help us evaluate the actual cause of the defect. Please read below for a detailed description of warranty coverage. Please note, if the product fails in any way, only the part that has failed will be replaced, we will not replace the entire unit.

Water Damage: Our products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and is therefore not covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean or use of additives/cleaners will also void the warranty. As with any product, all finishes with time will gradually fade and discolour. The warranty will only cover against severe or complete fading within the first year from date of purchase.

Not Covered Under in The Warranty: The limited warranty will NOT cover cases of damages due to 1. Damages caused in transit 2. Inadequate care and/or neglect 3. Environmental and/or natural elements 4. Immersion in water, unless specified 5. Improper Installation/Storage and/or Maintenance. This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach or chlorine, which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.



Disposal: The “Crossed Wheelie Bin” symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Battery Warnings! Batteries should only be inserted or changed by an adult. Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged. Be sure to insert batteries with the correct polarities and always follow the product and battery manufacturers’ instructions. Remove batteries from product before extended storage. Always remove old or exhausted batteries from the product. The supply terminals are not to be short circuited. Check that the contact surfaces are clean and bright before installing batteries. Do not bury or burn batteries. Recycle used batteries responsibly. Do not dispose of in household waste.

Please retain this information for future reference.

Made in China