

Product Description

- A4 Light Up Talk Time Card
- IT10230
- Rating: 1.5V AA Batteries (not supplied)

Important Information

- Please read these instructions carefully before using the Talk Time Card.
- Please retain this information for future reference as it contains important information.

Battery Information

- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.
- The Talk Time Card is powered by 3xAA batteries (not supplied).
- Do not mix different types, or old and new batteries.
- Replacement of batteries should only be performed by an adult, and all batteries should be stored out of reach of children.
- Please ensure batteries are removed from the product before storage.

Battery Replacement

- To replace the batteries, remove the battery hatch cover with a screwdriver and responsibly dispose of any exhausted batteries.
- Insert new batteries, following the polarity marking on the product.
- Replace the battery hatch cover and tighten the screw.

Cleaning and Maintenance

- Never immerse the toy into water or other liquids.
- Keep away from moisture or dirt.
- Wipe the toy with a damp cloth or use a mild, non-abrasive soap solution.
- Make sure to properly clean the unit before storing it in a cool, dry place.

Instructions for use

The Talk Time Cards have three operating modes:

- Light-up only mode - press the Play button three times in quick succession, and the green backlight will stay on until the play button is pressed once more.
- Record mode - press and hold the record button on the rear of the product and speak to record a message. Release the button when finished recording (maximum of 60 seconds).
- Playback mode - press the Play button once, the recorded message will play, and the whiteboard area will illuminate green during playback.
- If the unit no longer lights, the light has dulled or the audio is distorted, please replace the batteries as described above.
- Use only drywipe markers on the writing surface. To erase the screen use a soft damp cloth, and avoid the use of solvents which may damage the surface.



TTS Group Ltd. NG17 9GU, UK.
Made in China, on behalf of TTS Group Ltd.
TTS Product Code:
IT10230



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

TTS is proud to be part of **RM** plc