
## ASSEMBLY INSTRUCTIONS ITEM NO:BEX-712-9010-1





www.bexsport.com

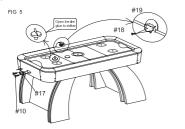


## PARTS IDENTIFIER

#1	#2	#3	#4	#5
	[ F)	(7		(6)
Cabbet	Right Leo	Left Leg	Side Apron A	End Apron
1 pc	2 pcs	2 pcs	1 pos	2 pcs
#6	#7	#8	#9	#10
П		-	0	-
Leg End Penel 2 pcs	Corner 4 pcs	Bofts 16 pcs	Washers 16 pcs	Screws 40 pcs
#11	#12	#13	#14	#15
•	0	-	<b>-</b> 97	0
Bolts 12 pcs	Washers 24 pcs	Screws 12 pcs	Wrench 1+1 pc	Puck 2 pcs
#16	#17	#18	#19	#20
తిం	0	-	<b>®</b>	
Pusher and Felt 2 pcs	Goal Box 2 pox	Screws 2 pcs	Electronic Scorer	Side Apron B 1 pos
#21	#22			
<b>(</b>	10			
	Ball Receivers			
Nuts 12 pos	200			

FIG 1

FIG 2

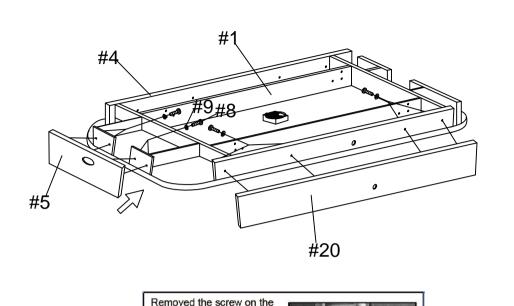

#19 #12 #11

Removed the screw on the goal box before you attached it on the right position as show in figure Lossa målet från transportfästet. Montera det på utsatt plats. #10 #22 #7 #10



