
ASSEMBLY INSTRUCTION

OPERATING INSTRUCTION

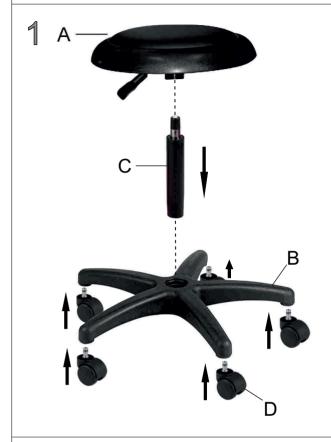







Please insert the gas spring first, than take off the protection sticker.







B x1



Α

C x1

D x5

A x1