


Powerdot Bracket Mini

□ 935-SF01W

■ 935-SF01B



CONTENT:

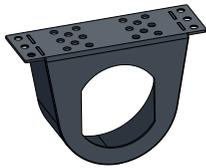

x1




x1




x6


- 1** ASSEMBLE WITH POWERDOT & NUTS
Feed the Powerdot Mini cable through all holes. Then, insert the Powerdots through the Bracket and Distancing Nut.

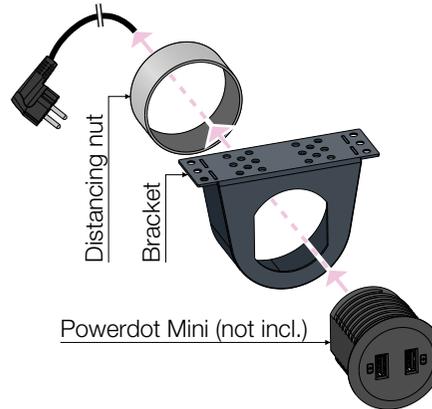

- 2** MOUNT BUSHING TO NUT
Mount the Powerdot Nut until it is thoroughly tightened to the distancing nut. Test the assembly by shaking it. If it rattles, then the Powerdot Mini is not fully tightened.

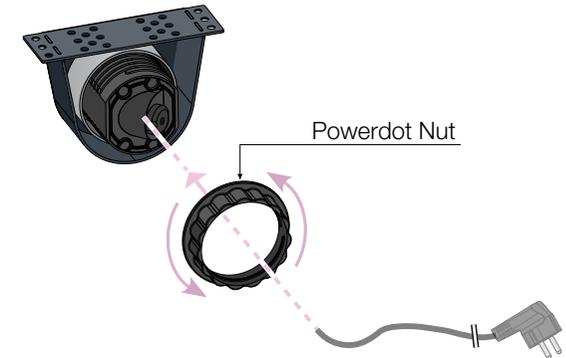

- 3** MOUNT TO TABLE / FURNITURE
Using 4 to 6 screws (4x16 mm), mount the assembled bracket with all components to the underside of intended furniture or table.

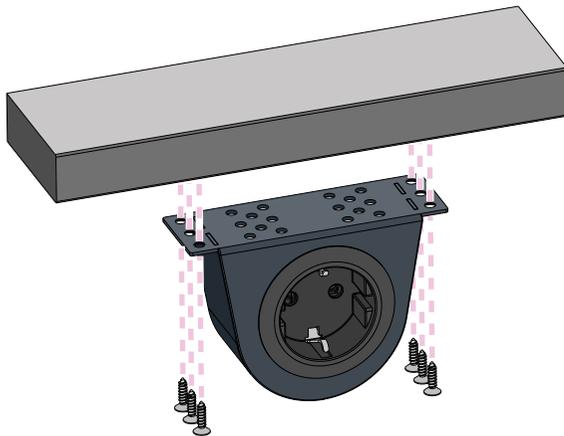

- 4** ROUTE CABLES AND PLUG IN
Once all steps are completed, route the cables appropriately for the intended usage and connect the plug to a socket. Visit our website to find cable-management accessories.

