


Powerdot Bracket Mini

□ 935-SF02W

■ 935-SF02B



CONTENT:

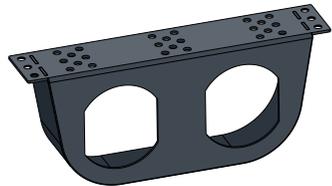

x1




x2




x6


- 1 ASSEMBLE WITH POWERDOT & NUTS**
Feed the Powerdot Mini cable through all holes. Then, insert the Powerdots through the Bracket and Distancing Nut.

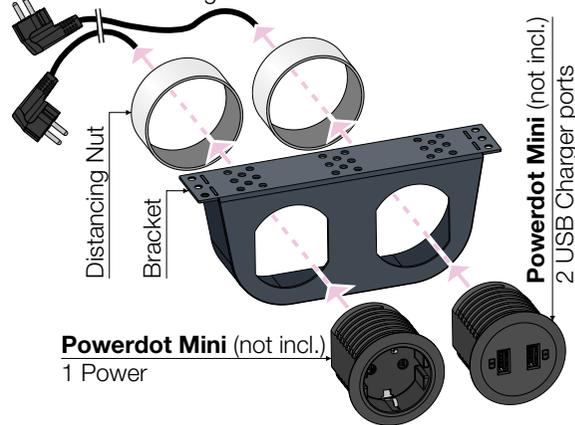

- 2 MOUNT BUSHING TO NUT**
Mount the Powerdot Nut until it is thoroughly tightened to the distancing nut. Test the assembly by shaking it. If it rattles, then the Powerdot Mini is not fully tightened.

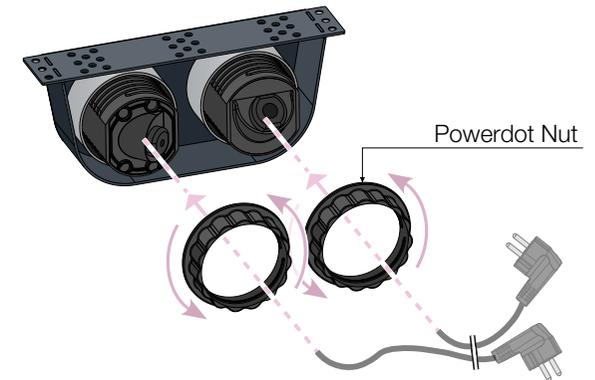

- 3 MOUNT TO TABLE / FURNITURE**
Using 4 to 6 screws (4x16 mm), mount the assembled bracket with all components to the underside of intended furniture or table.

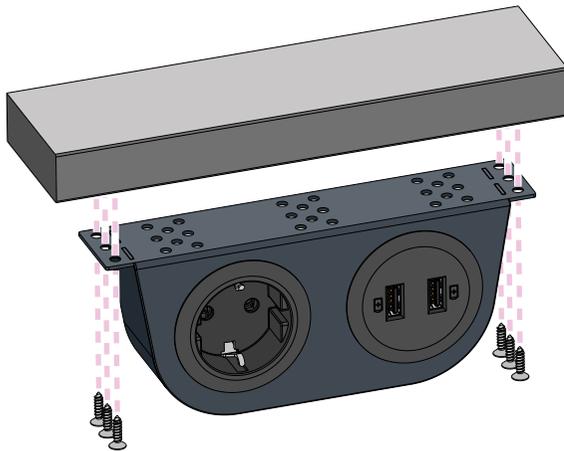

- 4 ROUTE CABLES AND PLUG IN**
Once all steps are completed, route the cables appropriately for the intended usage and connect the plugs to sockets. Visit our website to find cable-management accessories.

